ARC-1030SB

AROMA®

*#1 Rice Cooker Brand**

Quick Start Guide

1 Add Rice

Add 2 to 10 cups of rice to the rice cooker. Rice will roughly double in amount once cooked.

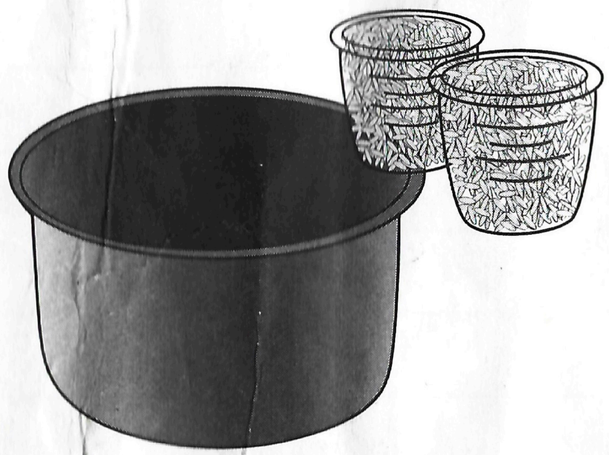

2 Add Water

Fill the inner cooking pot with water until reaching the line that corresponds to the amount of uncooked rice added.

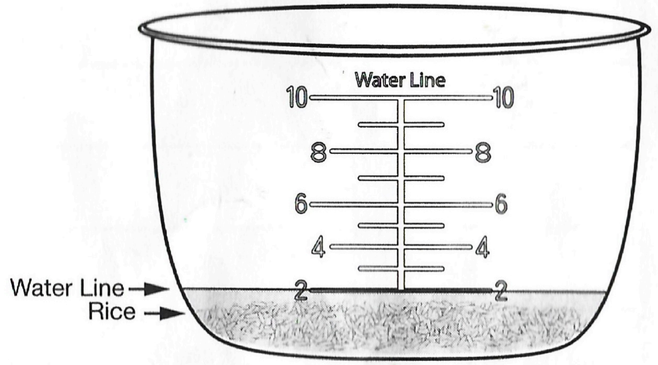

3 Press a Button

Turn on the rice cooker and press the WHITE RICE or BROWN RICE button (depending on the rice being made). Once the rice is ready, the rice cooker will beep and automatically switch to Keep-Warm.

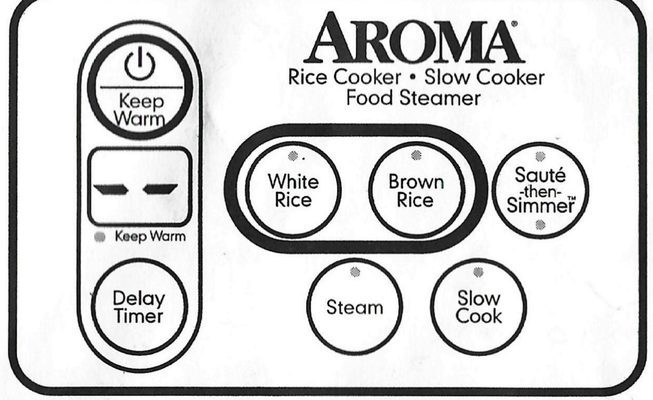

Questions or concerns about your rice cooker?

Before returning to the store: Aroma's customer service experts are happy to help.
Call **1-800-276-6286** or visit us at **www.AromaCo.com**.

*Based on 2012 NPD POS Data.

AROMA®

Quick Tips

What is Sauté-Then-Simmer™?
Sauté-Then-Simmer™ allows the rice cooker to sauté ingredients at high heat. After adding liquid, the rice cooker will automatically switch to its simmer mode. This process will take about 5 minutes. The lower indicator light on the button will illuminate once simmer mode begins.

Misplaced your measuring cup?
A ¾ standard US cup is an exact replacement.

Rice too dry?
Add a cup of water and press WHITE RICE. The rice cooker will switch to Keep-Warm once rice is ready.

Rice too moist?
Use the serving spatula to stir the rice. Allow the rice to remain on Keep-Warm for 30 minutes.

For complete instructions and tips on how to unlock the full potential of your rice cooker, refer to the included instruction manual.

Questions or concerns about your rice cooker?

Before returning to the store: Aroma's customer service experts are happy to help. Call **1-800-276-6286** or visit us at **www.AromaCo.com**.

Rice/Water Measurement Chart

UNCOOKED RICE	RICE WATER LINE INSIDE POT	APPROXIMATE COOKED RICE YIELD	COOKING TIMES	
			WHITE RICE	BROWN RICE
2 Cups	Line 2	4 Cups	30-35 Min.	100-105 Min.
3 Cups	Line 3	6 Cups	32-37 Min.	102-107 Min.
4 Cups	Line 4	8 Cups	34-39 Min.	110-115 Min.
5 Cups	Line 5	10 Cups	38-43 Min.	114-119 Min.
6 Cups	Line 6	12 Cups	40-45 Min.	116-121 Min.
7 Cups	Line 7	14 Cups	41-46 Min.	118-123 Min.
8 Cups	Line 8	16 Cups	43-48 Min.	120-125 Min.
9 Cups	Line 9	18 Cups	44-49 Min.	123-128 Min.
10 Cups	Line 10	20 Cups	46-51 Min.	125-130 Min.

Minimum Cooking Capacity: 2 Cups Uncooked/4 Cups Cooked